

SOLOIST

GUITAR & ACCESSORY HANGER



WALL-AXE
MADE IN USA

Lambo Designs, LLC.

www.wallaxe.com

Email: info@wallaxe.com

Phone: 1-877-38-MYAXE

INSTALLATION GUIDE

RECOMMENDED TOOLS

- Phillips Head Screwdriver
- Power Drill, with 1/8", 3/16" & 1/2" Drill Bits
- Level
- Pencil
- Hammer
- Stud Finder (preferred)
- Tape Measure (preferred)

1. Make certain you have all provided hardware:

- | SOLOIST Base
- | Round Yoke Plate
- | Guitar Hanger (padded yoke)
- | (4")Machined Screw w/Winged Nut (for center hole)
- | (2.5")Gold Deck Screw (for center hole)
- | (2.5")Black Plate Screw (for bottom hole)
- | (.75")Top Black Plate Screw (for top hole)
- | Yellow Plastic Drywall Insert

2. Cut out "Drill Guide." (pictured) >>>

3. For preferred installation into wall stud, use your stud finder to find & mark your wall stud vertical center.

4. Using your "Drill Guide" and level, determine a comfortable reach in height for your SOLOIST. (Fig. 1)

Typically, between 75" - 80" from the floor. Beware to leave at least 8" from the ceiling for easy lift and removal of your guitar's headstock from hanger yoke.

5. Pencil mark/poke through your paper "Drill Guide" dots onto wall. (Fig.2)

6. Drill holes into wall using drill bit sizes determined on your "Drill Guide." (Fig.3)

Note: Bit sizes to use will differ by whether you found a wall stud or not. See "Drill Guide" for details before you proceed.



WAIT! "YES, I DRILLED INTO A WALL STUD."

7. Insert both 2.5" Gold Deck Screw (center hole) and 2.5" Black Plate Screw (bottom hole) through base of SOLOIST.

8. Place SOLOIST on wall over holes. Start both screws by hand. Fully tighten ONLY the 2.5" Gold Deck Screw through center hole with power drill or screwdriver. Remove bottom Black Plate Screw.

When mounting to wall stud, use:

When mounting to drywall, use:

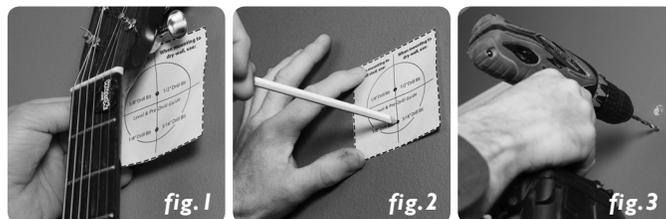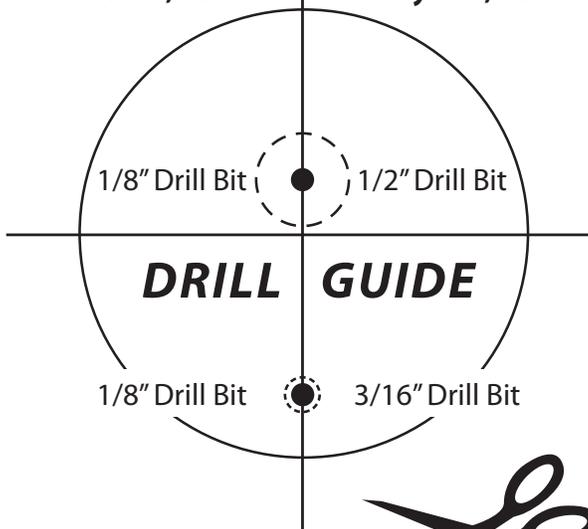

"NO, I DRILLED INTO ONLY DRYWALL."

7B. Tap in Yellow Plastic Insert into bottom 3/16" hole until flush with wall surface. (Fig.4)

8B. Insert 4" Machine Screw through (Fig.5) center hole of SOLOIST. Start Winged Nut on back side approximately 1" onto threads.

9B. Hold SOLOIST up to wall and push collapsed winged nut through top 1/2" hole. Then, pull back to ensure that winged nut has expanded/anchored on back side of drywall. (Fig.6)



fig.7



fig.8

SOLOIST GUITAR & ACCESSORY HANGER

ORGANIZE THESE COMMON GUITAR ACCESSORIES!

Guitar Picks, Thumb Picks, Capo, Clip-On Tuner,
Guitar Straps, Patch Cable, Finger Slide



fig.9

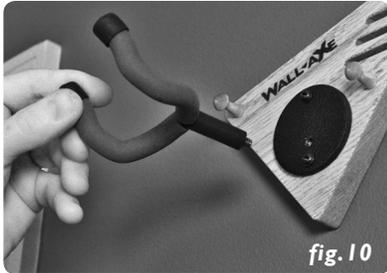


fig.10

10B. Temporarily start 2.5" Black Plate Screw through the bottom hole of SOLOIST and into Yellow Plastic Insert. (No yoke plate required yet)

11B. With both mounting screws started, pull center screw towards you. Making sure the mount holes remain vertical, tighten 4" Machine Screw (Fig.7) You may need to pull SOLOIST base towards you as you tighten with Phillips head screwdriver.

12B. After center screw is securely tightened, remove bottom mounting screw completely. (Fig.8)

13. Place Round Yoke Plate on SOLOIST with large threaded hole rotated towards bottom.

14. Insert the 2.5" Black Plate Screw through bottom (Fig.9) hole of plate & SOLOIST. Begin, but do not fully tighten.

15. Insert .75" Black Top Plate Screw through top hole of plate. Securely tighten.

16. Securely tighten bottom screw.

17. Screw hanger into yoke plate. DO NOT over tighten. (Fig.10)

18. Enjoy your new SOLOIST: Guitar & Accessory Hanger!

Submit a photo of you & your SOLOIST to our Wall-Axe Gallery!

Just email photo attachment to:
info@wallaxe.com

and YOU or YOUR BAND could be featured!

Installation Diagram

For preferred wall stud installation...
Replace 4" Machined Screw & Winged Nut
with Gold 2.5" Deck Screw provided.
Discard Yellow 1" Plastic Drywall Insert.

